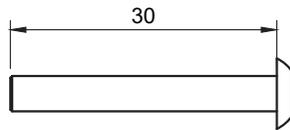
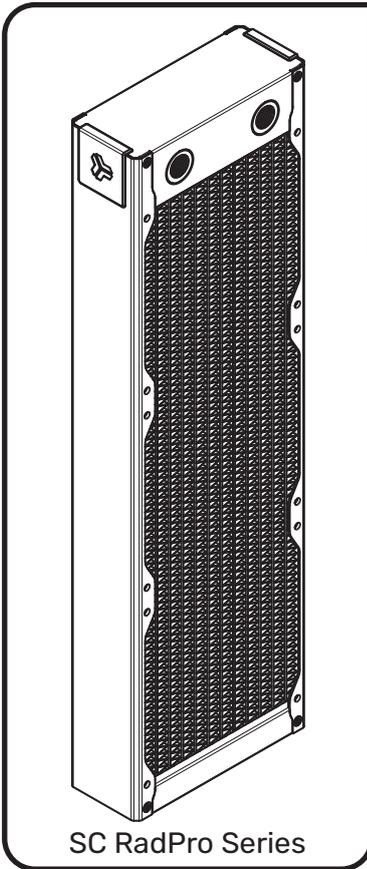


**TABLE OF CONTENTS**

 
1.	PACKAGING CONTENT WARNING	3
2.	DIMENSIONS (mm)	4
3.	INSTALLING FANS	6
4.	LOGO-PLUG CHANGE SYSTEM	8
5.	EXPLODED VIEW OF THE REMOVABLE COMPONENTS	9
6.	INSTALLING THE CONNECTIONS	10
7.	SUPPORT AND SERVICE.....	10

1. PACKAGING CONTENT WARNING

This product is intended for advanced users. Improper installation may result in damage to your equipment. While every effort has been made to provide the most comprehensive information possible, Stealkey Customs assumes no liability, express or implied, for damage to your components resulting from the use of Stealkey Customs cooling products, whether due to errors or omissions on our part in the instructions below, or due to errors or defects in Stealkey Customs cooling products. Do not disassemble the distro plate. Doing so will void the warranty. Turn off your system and discharge your body's static charge before proceeding with the installation. If you do not feel comfortable performing the installation procedure, contact a qualified computer technician.

BOX CONTENTS


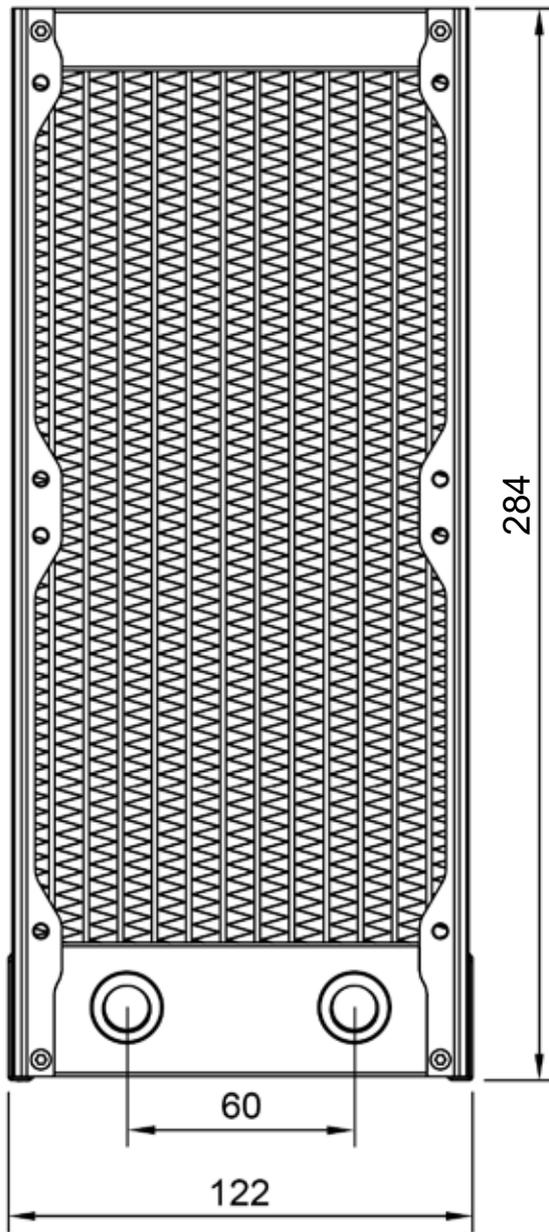
M4 x 30 mm for 25 mm thick fans




M4 x 5 mm for mounting the radiator directly to the case



2. DIMENSIONS (mm)




Radiator 240 mm

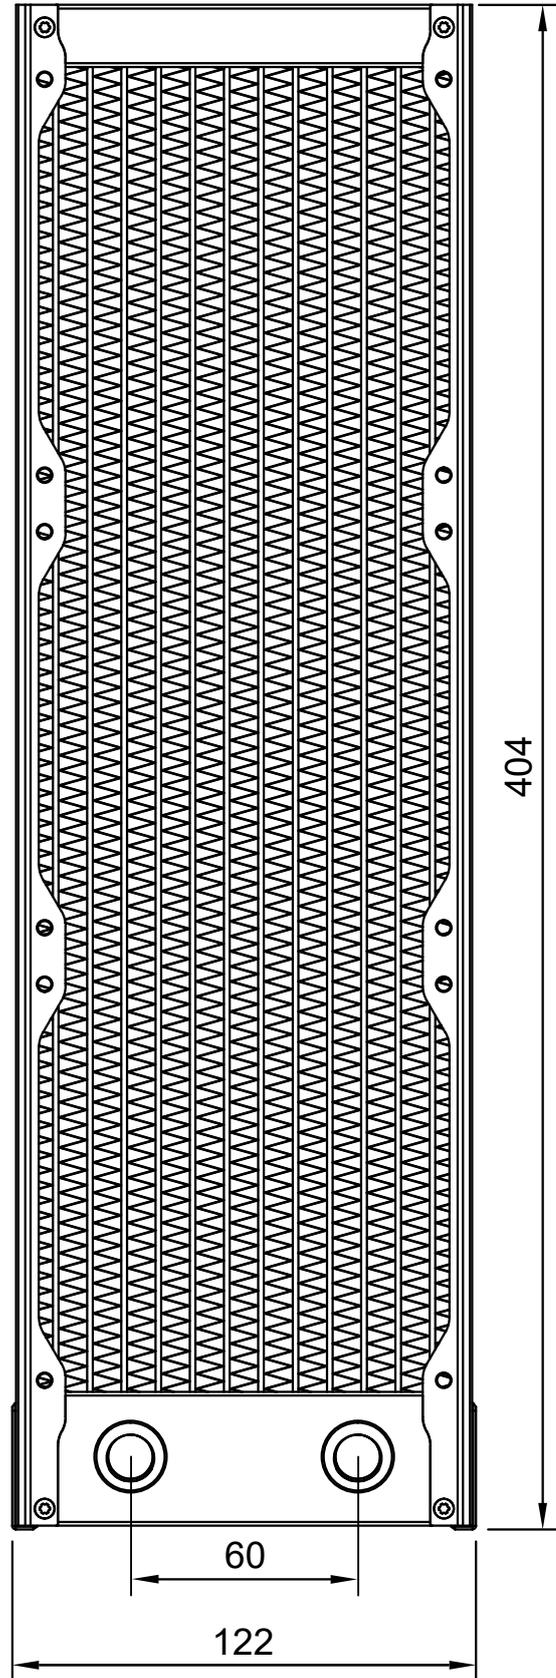


Radiator 360 mm



SIDE VIEW

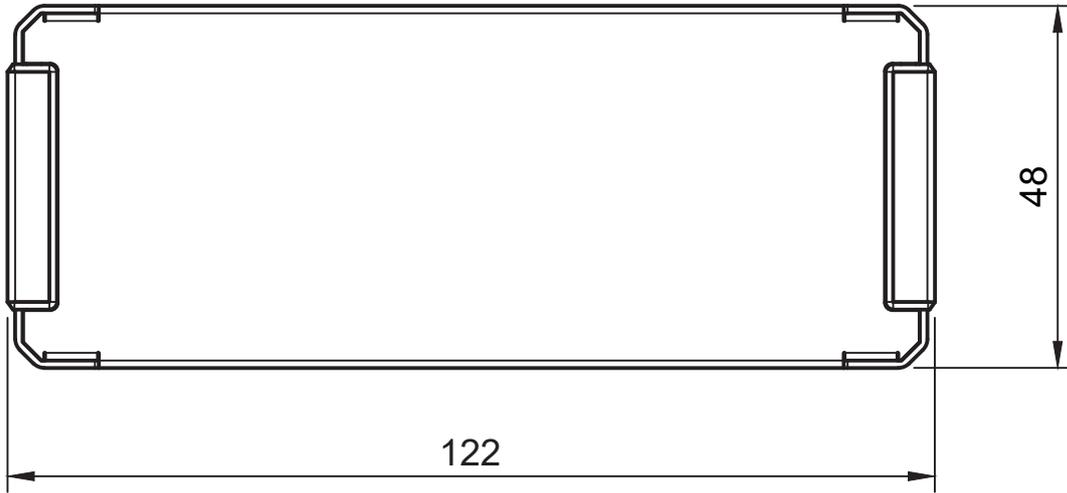

RadPro H48

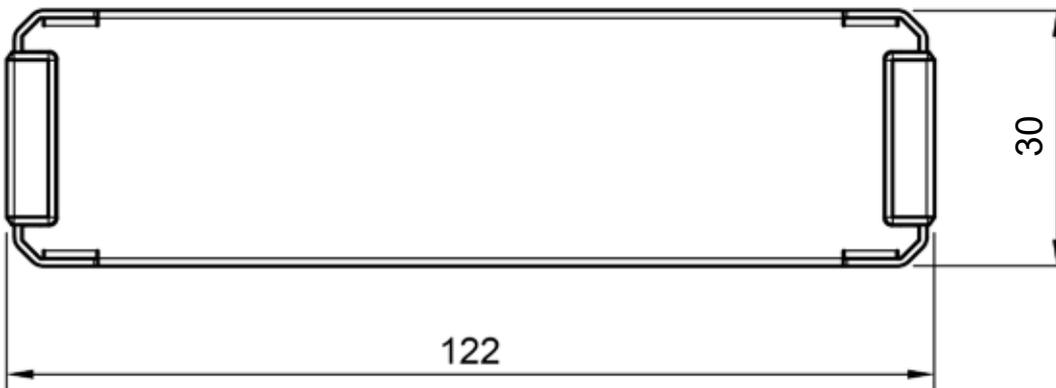

RadPro H30





3. INSTALLING FANS


STEP 1

Mount the fans using the enclosed M4 x 30 mm mounting screws.

Mounting material

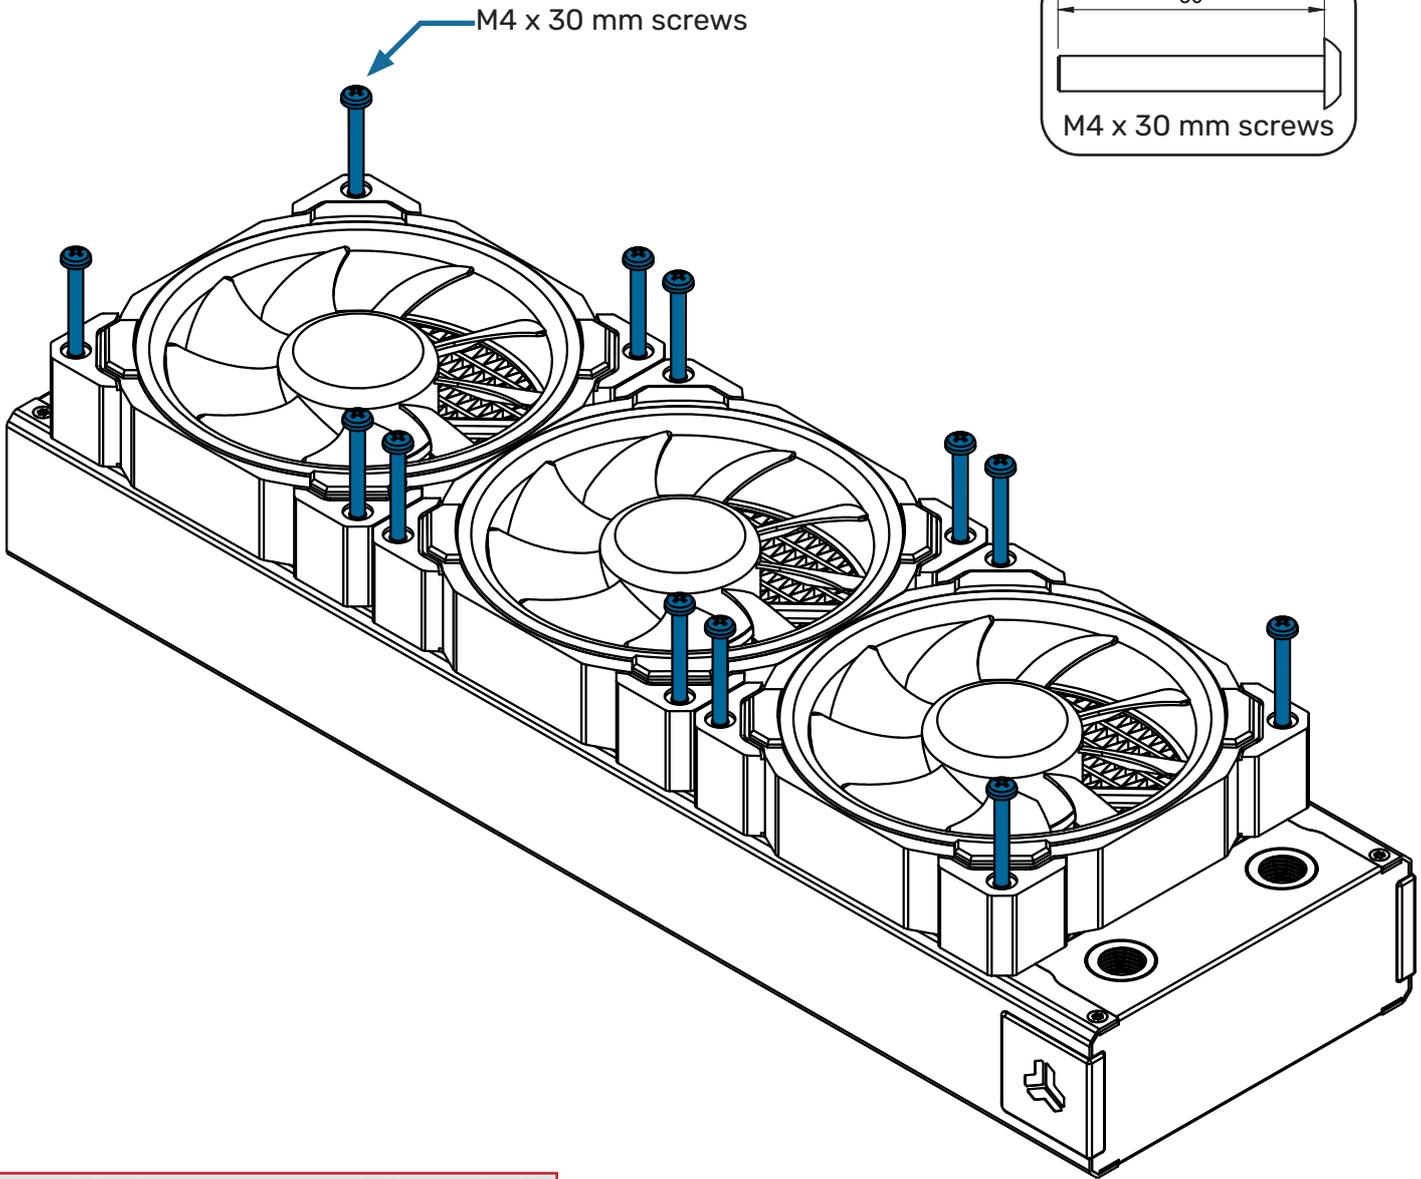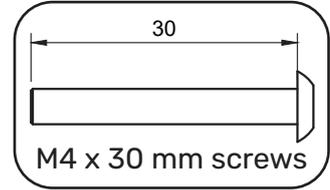



 Attention, screws can only be used with 25 mm standard fan.

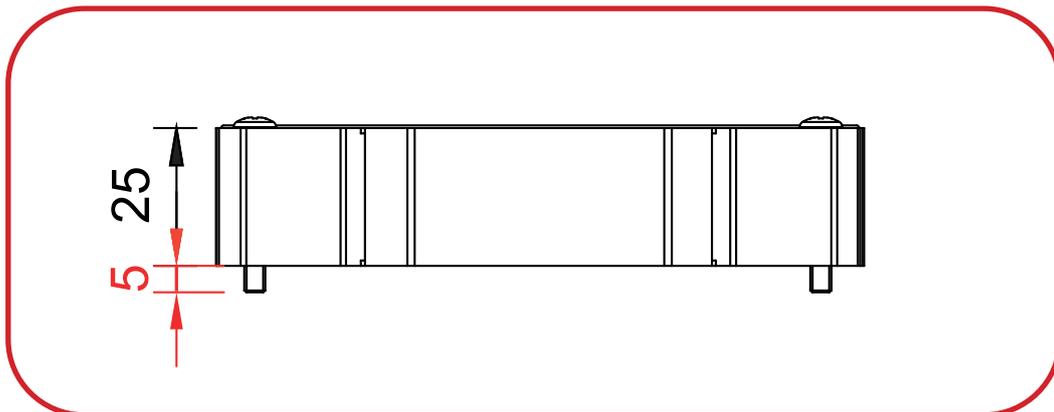

STEP 2

Using the included M4 screws you can mount the radiator directly to your chassis or any other standard fan mounting location.

Mounting material

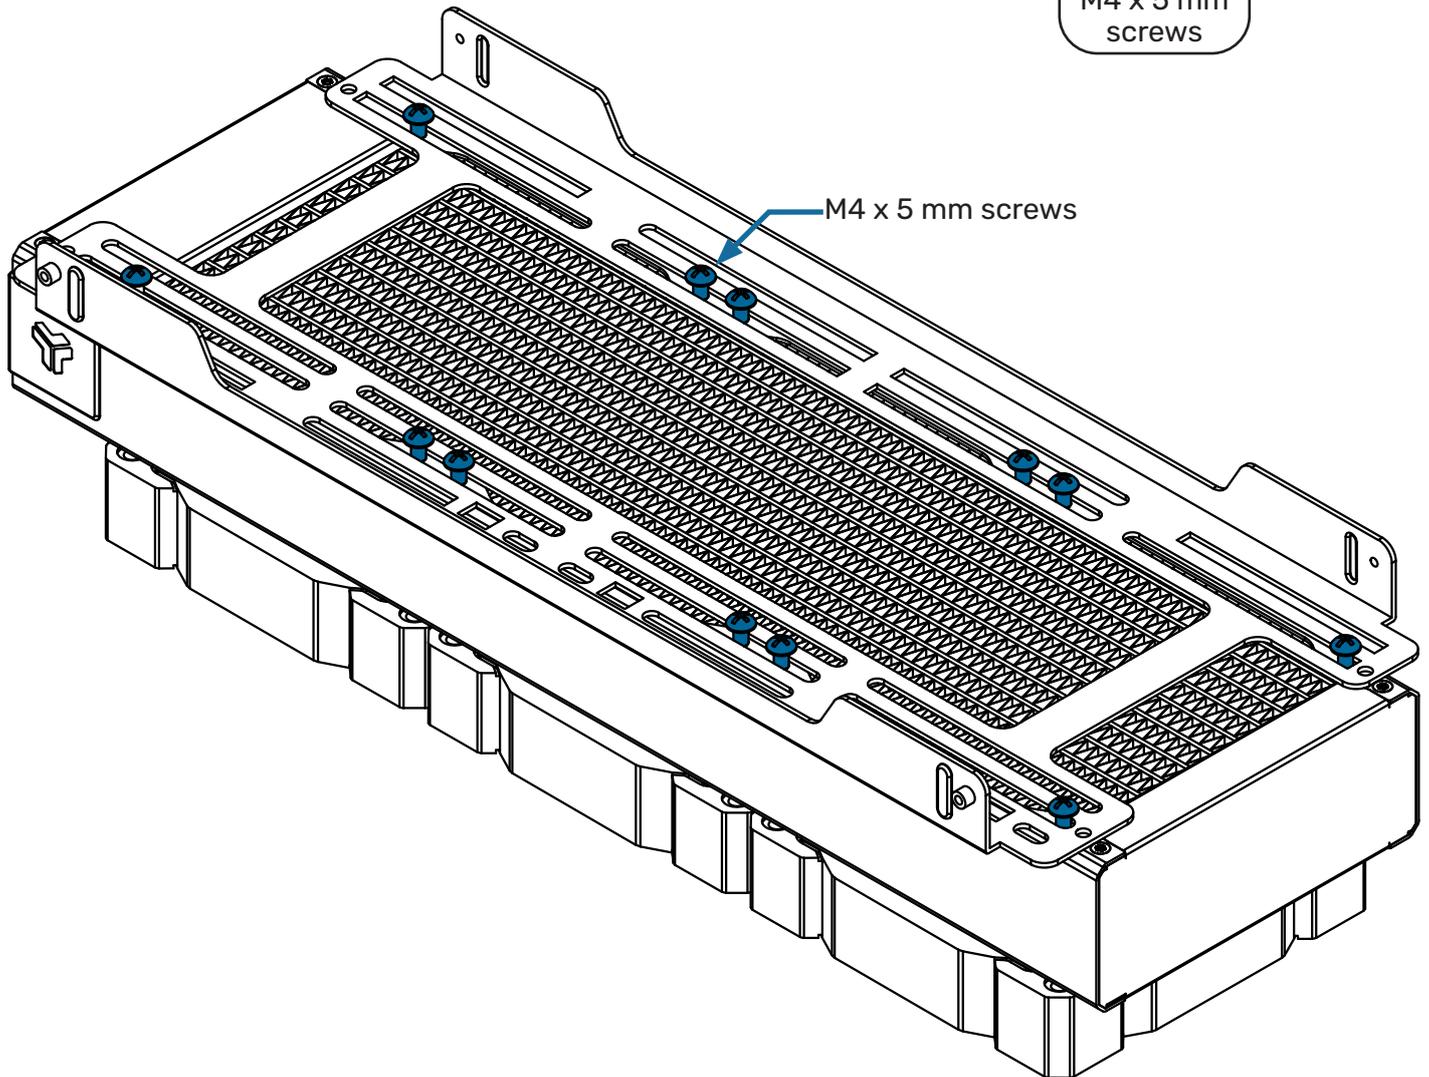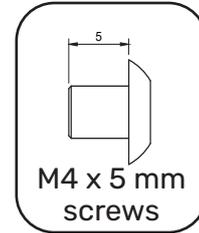


4. LOGO-PLUG CHANGE SYSTEM

Each side of the radiator features a removable logo plug. This allows the logo to be repositioned depending on the installation orientation, ensuring it is always correctly aligned—even in top-mount or bottom-mount setups.


STEP 1

Slide both logo plugs forwards. Swap the two logo plugs from right to left.

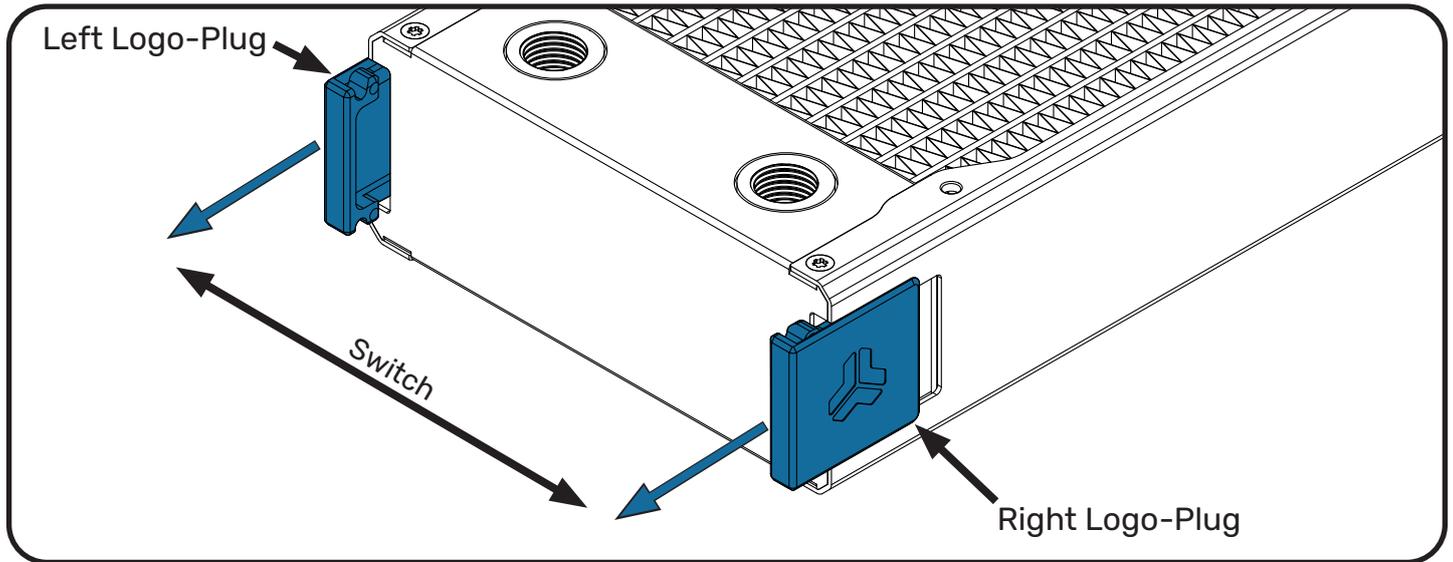


STEP 2

Push them back onto the radiator until it clicks.

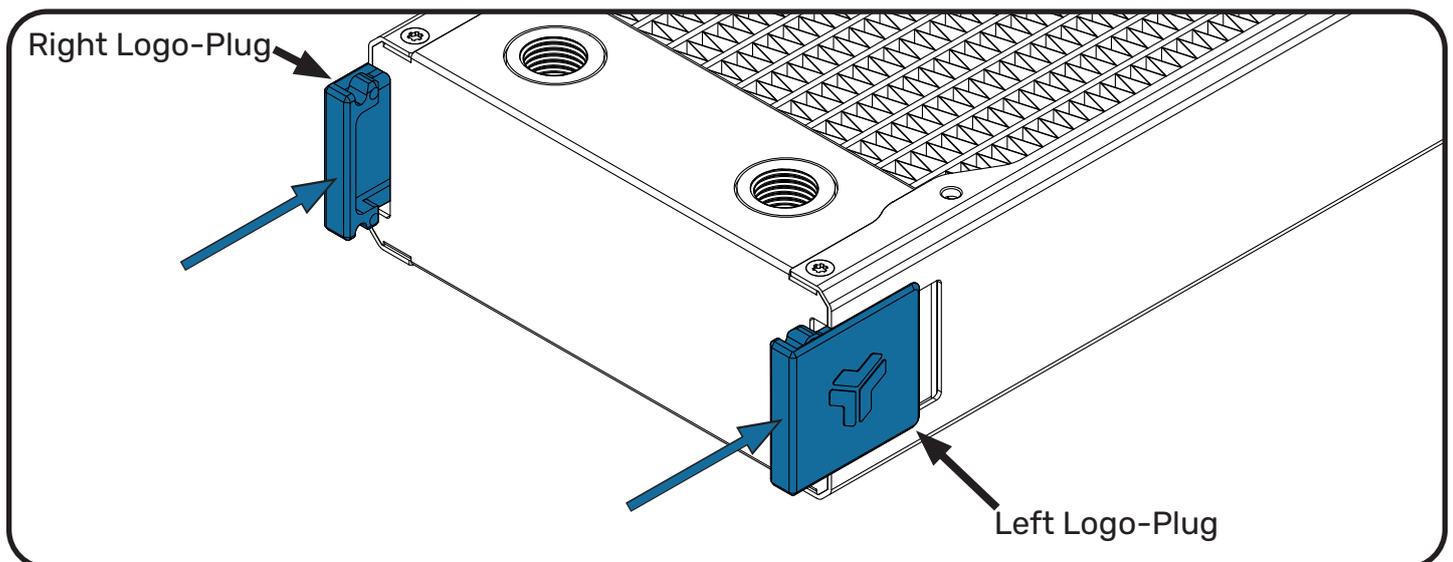

5. EXPLODED VIEW OF THE REMOVABLE COMPONENTS

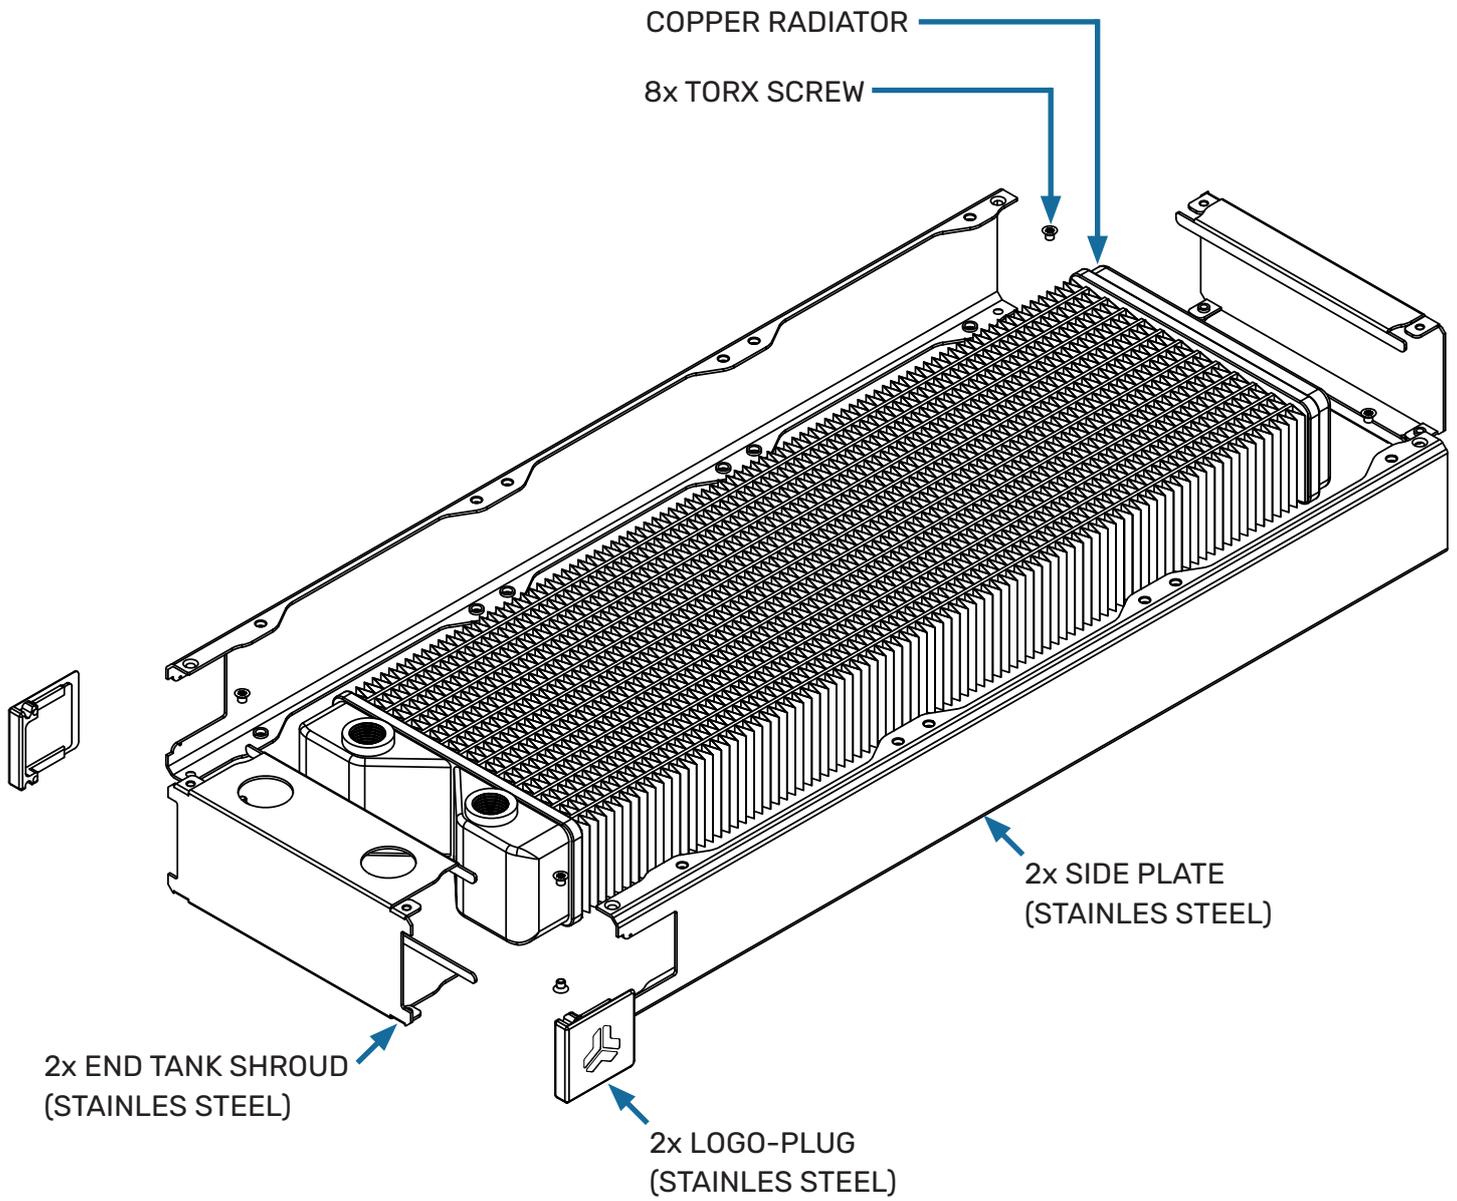

8. INSTALLING THE CONNECTIONS

Mount the connections with G1/4 thread and close the remaining connections with stop fittings. Always perform a leak test before applying power to the system components (max. 0,5 bar). Carefully loosen the shut-off valve of the filling connection to allow trapped air to escape.

10. SUPPORT AND SERVICE

Contact

Stealkey Customs

Mail: support@stealkeycustoms.de

Instagram: <https://www.instagram.com/stealkeycustoms>

Website: <https://www.stealkeycustoms.de>

FAQ: <https://www.stealkeycustoms.de/pages/faq>

